

What's in the Box

If you purchased Monitor + Camera kit

If you purchased Add-On Camera

At a Glance

Camera

Monitor

Using Your Camera and Monitor

Power On / Off

Connect the Camera and Monitor

Add a Camera to the Monitor

Charging Your Camera and Monitor

Charge the Camera

Charge the Monitor

Monitor Screen Guide

Menu Settings

On-Screen Icons

Placing the Camera


On the Wall

On a Table or Shelf

On the Crib

What's in the Box


If you purchased Monitor + Camera kit

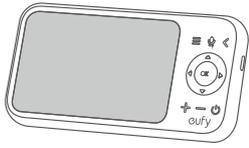


Monitor



 
Camera (T6310)




Camera Power Cable

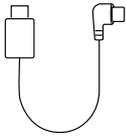

Monitor Power Cable

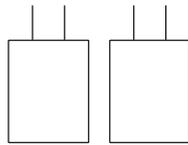


Power Adapter x 2

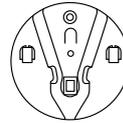

Mounting Plate



 Screw Pack




Quick Start Guide


If you purchased Add-On Camera



 
Camera (T6310)




Camera Power Cable

 


Power Adapter

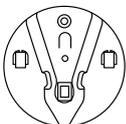

Mounting Plate

 

Screw Pack

 


Quick Start Guide

At a Glance


Camera

Front View

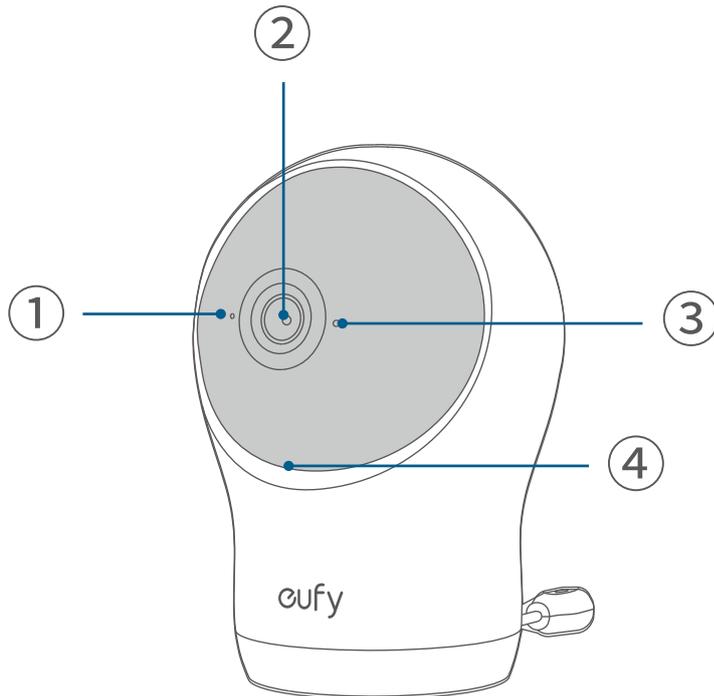


- ① Microphone
- ② Camera Lens
- ③ Status LED
- ④ SD Card Slot (Visible when the lens is tilted up)

Rear View

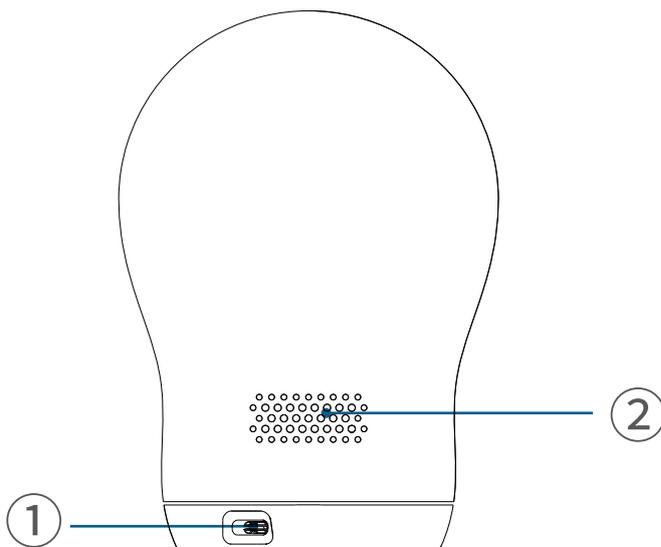

- ① USB-C charging port
- ② Speaker

Bottom View

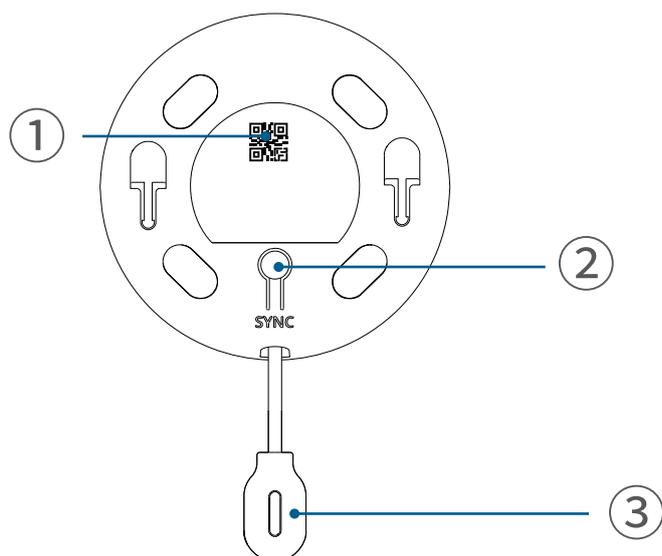

① QR code

- Scan to add the camera to the device list in the app.


② Sync button

- Press and hold for 2 seconds to enable the pairing mode.
- Press and hold for 8 seconds to reset the camera.

③ Temperature sensor

Monitor

Front View

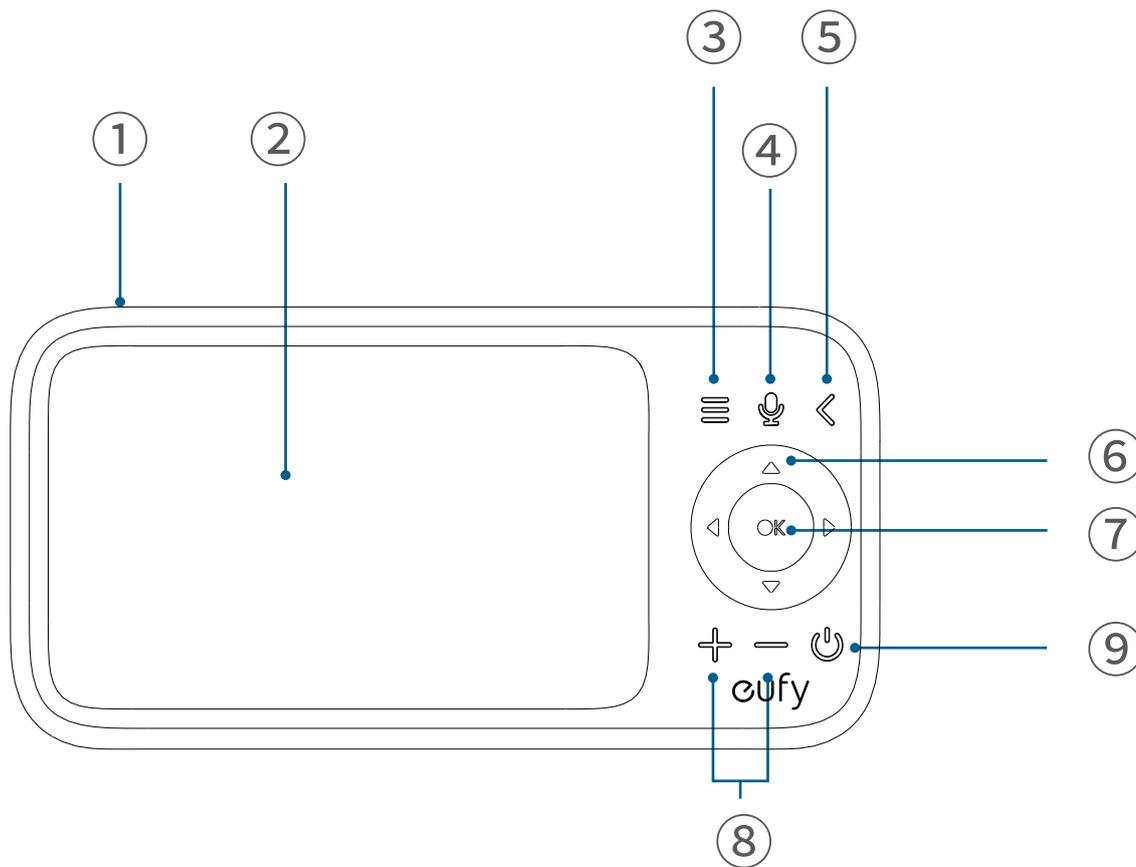

① **Microphone**

② **Screen**

③ **Menu Button**

④ **Talk Button**

• Press and hold to speak to the camera.

⑤ **Return Button**

⑥ **Navigation Buttons**

⑦ **OK / Zoom Button**


⑧ **Volume Up / Down Buttons**

⑨ **Power Button**

• Lock / Unlock Screen: Press

• Power On / Off: Press and hold for 2 seconds

Rear View

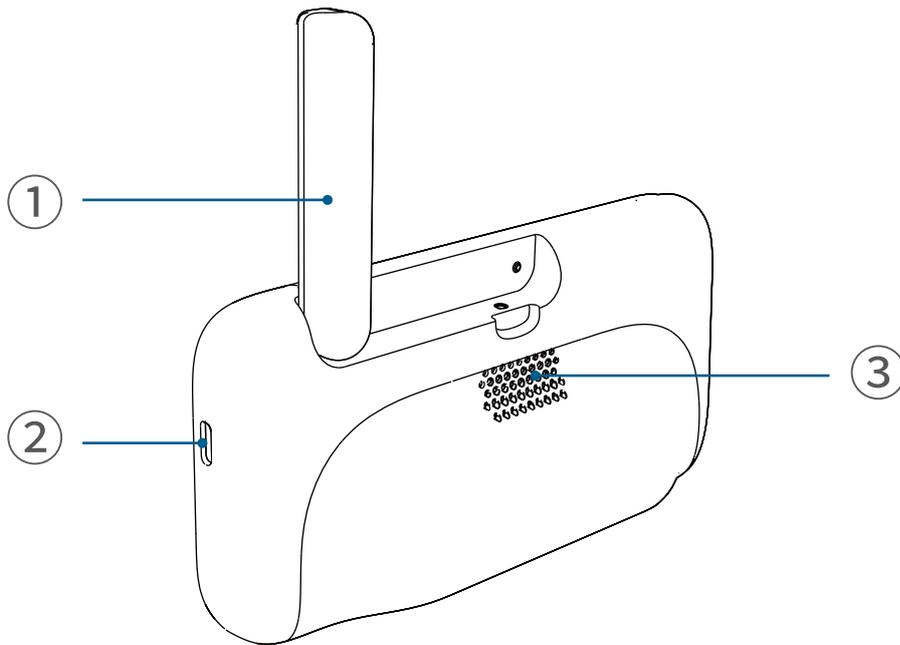


- ① Antenna
- ② USB-C charging port
- ③ Speaker


Using Your Camera and Monitor

Power On / Off

The camera powers on automatically when connected to power.

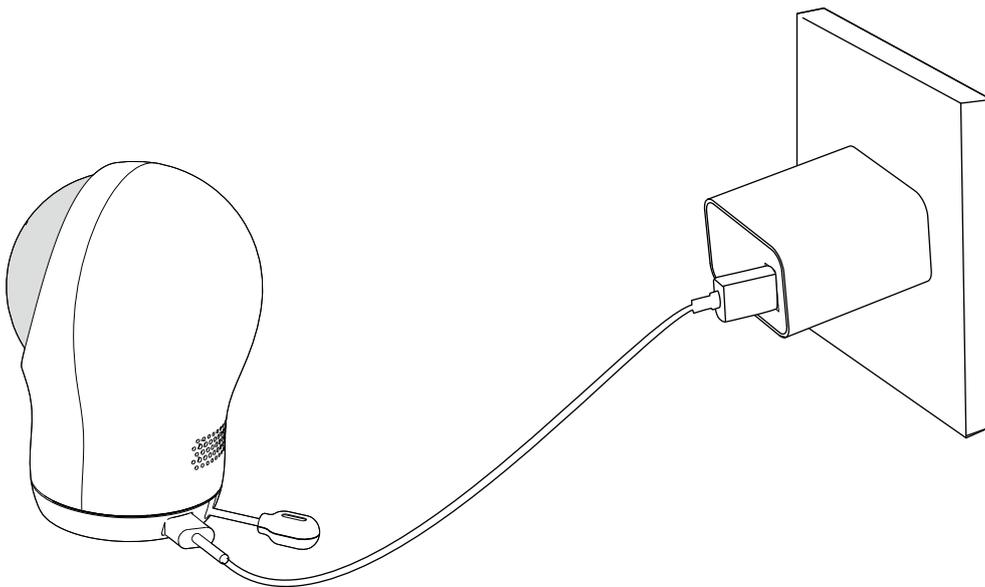


To turn the monitor on or off, press and hold the power button for 2 seconds.

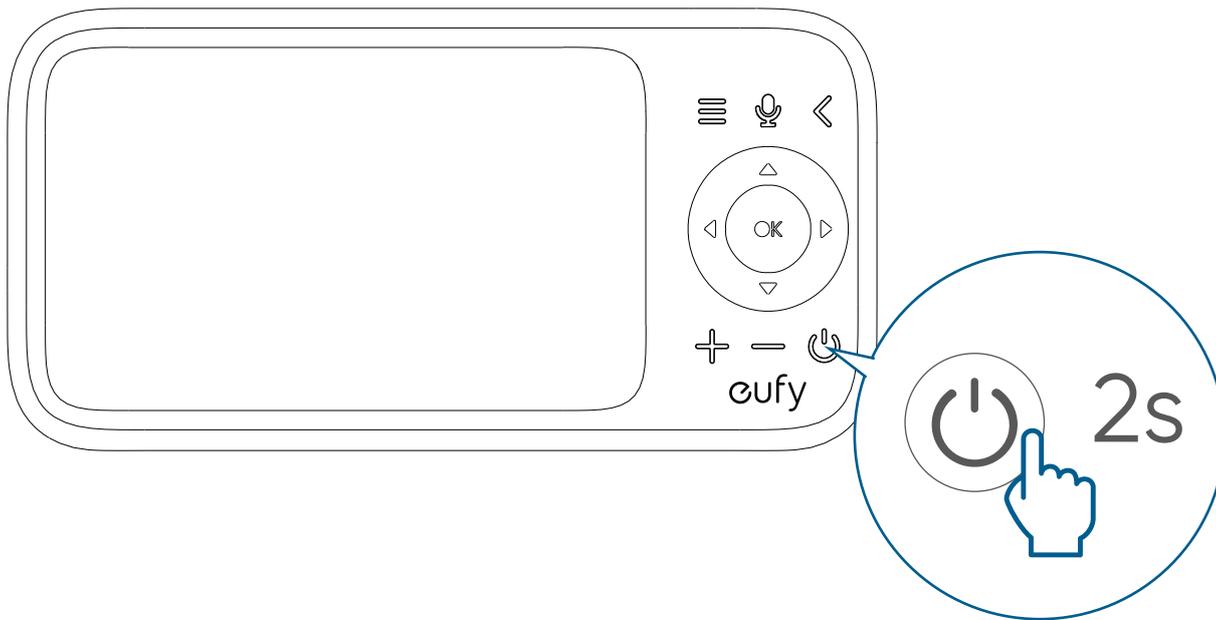

Connect the Camera and Monitor

Connect without Wi-Fi

Add the camera on the monitor after powering on.

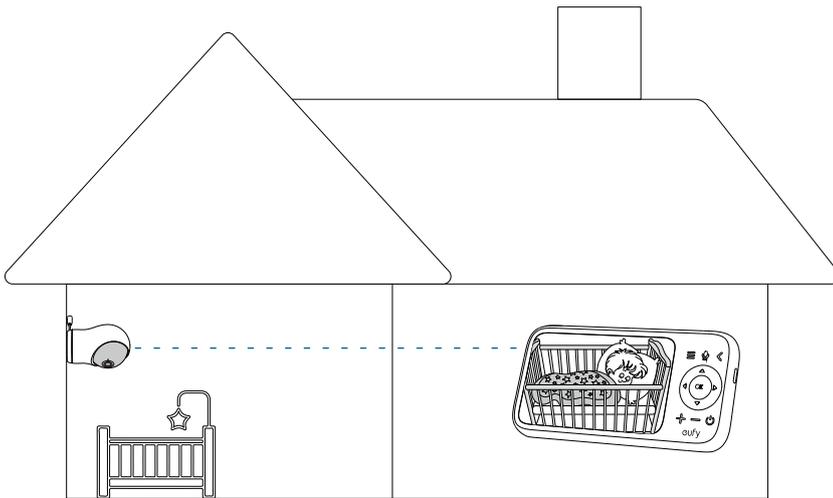


 If you connect the camera and monitor without Wi-Fi, the live video stream is only available on the monitor screen. To watch live video on your mobile device, connect the camera to the app.

If your camera and monitor are far apart or there are obstacles such as interior walls between them, signal strength may be reduced. To improve signal strength, move the monitor closer to the camera. Alternatively, you can connect the monitor to a Wi-Fi network.

Connect with Wi-Fi

Connect the Camera to the App


To control your camera and watch live video from anywhere, connect the camera to the eufy app.

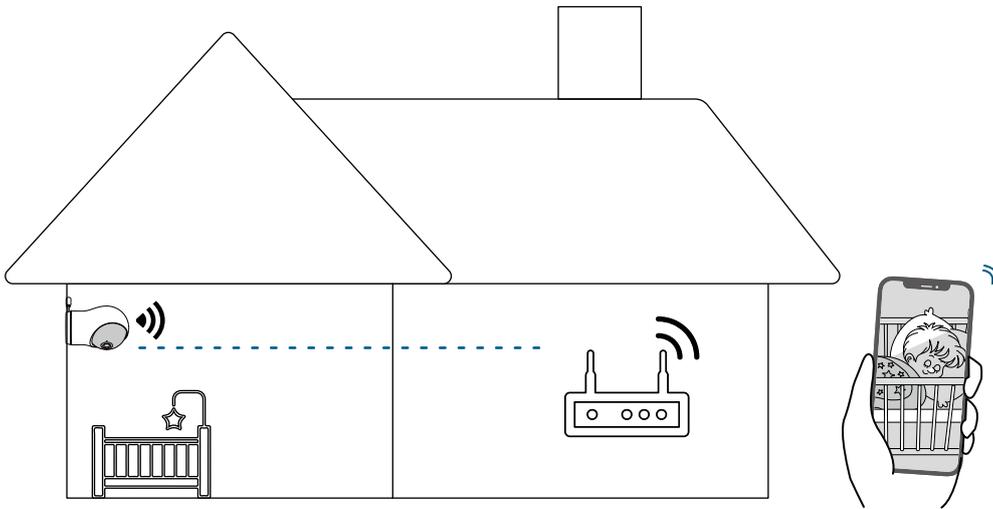

1. Download and install the eufy app from the App Store (ios devices) or Google Play (Android devices), and sign up for an account.




2. Scan the QR code at the bottom of the camera base to add the camera to the device list on the eufy app

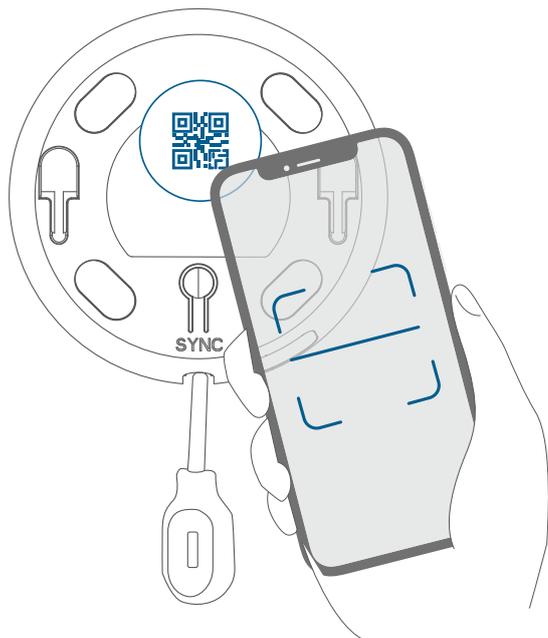

3. Follow the in-app instructions to connect the camera and monitor to your Wi-Fi network.

Connect the Monitor to Wi-Fi

Distance or obstacles between the camera and monitor may weaken the signal. To improve signal strength, you can connect the monitor to a Wi-Fi network.

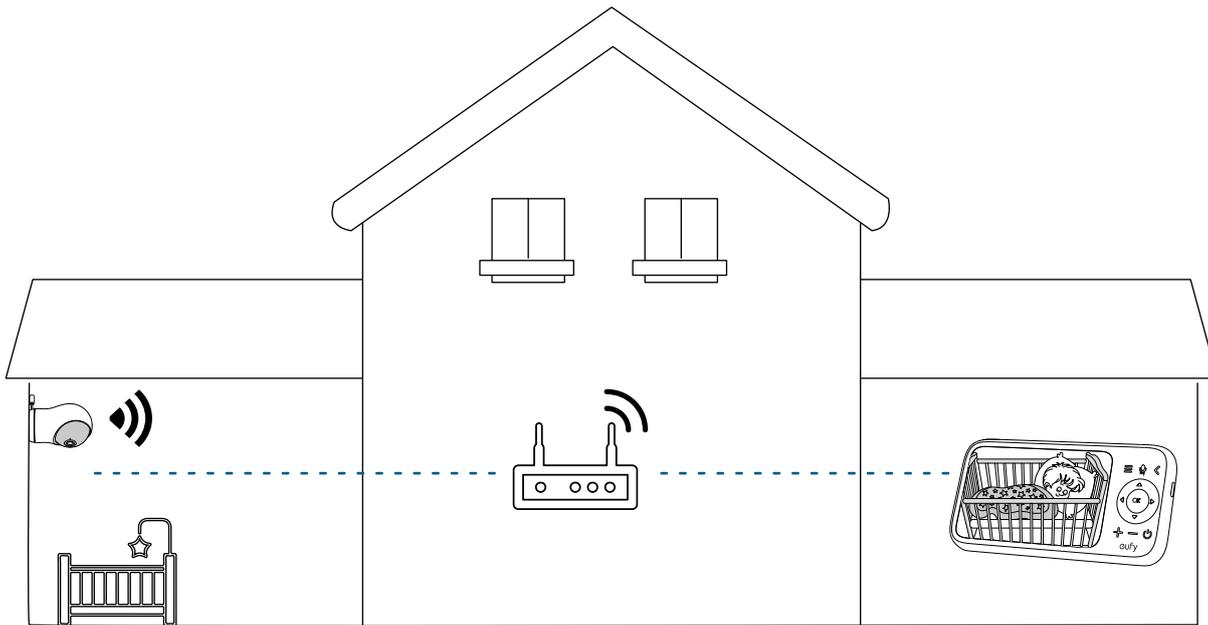


1. Place the camera and monitor in locations with a strong Wi-Fi signal.
2. Make sure that the camera is connected to Wi-Fi using the eufy app. For detailed instructions, refer to **Connect the Camera to the App**.
3. Press  on the monitor, go to  > **Smart Connect**, and turn on the Smart Connect switch.



Add a Camera to the Monitor

Your camera and monitor are paired out of the box. Refer to the following steps when adding extra cameras or after resetting a camera.

1. Press  on the monitor, and go to  > **Add Camera**.

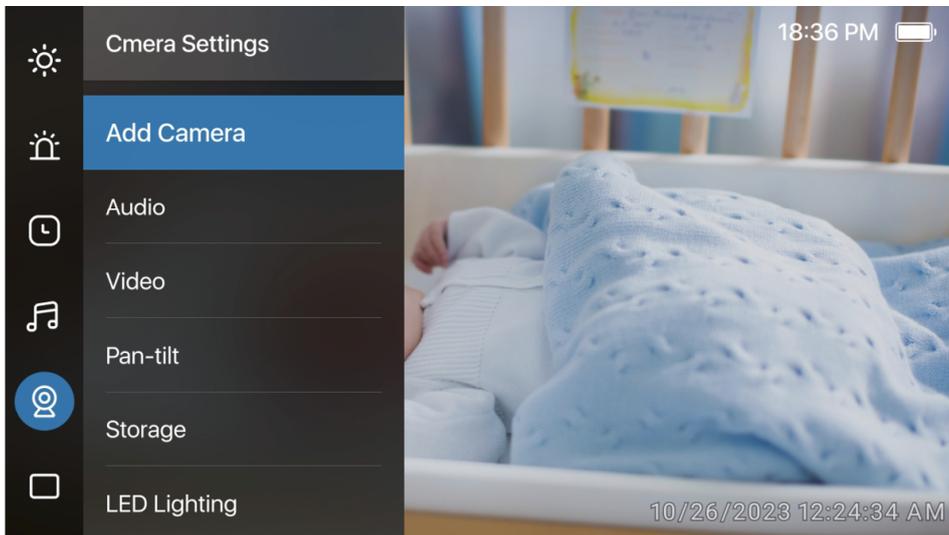


Connecting Your Camera to Power & Charging Your Monitor

 Before use, connect the camera to power and fully charge the monitor.


Connect Your Camera to Power

The camera powers on automatically when connected to power.

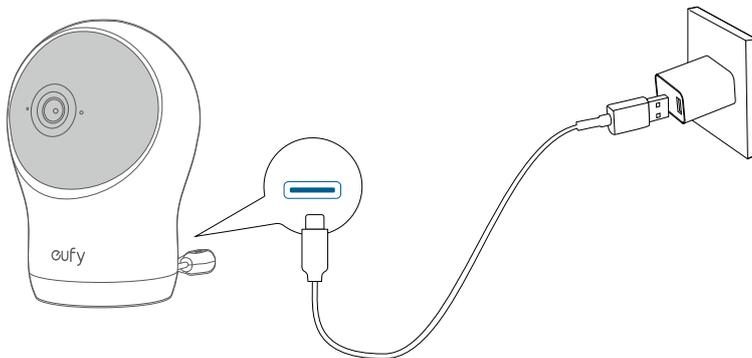

Charge the Monitor

The monitor can be charged via its USB-C charging port.

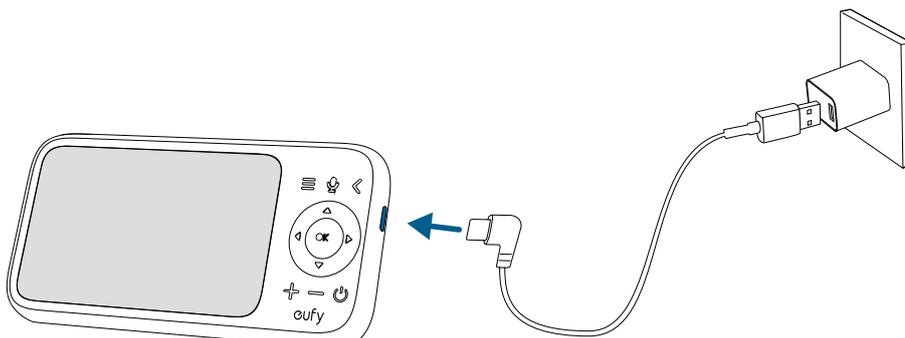

Monitor Screen Guide

Menu Settings

Press  on the monitor to access menu settings. Some of the options are not available when the camera is offline or has not been added.

Brightness	Set the brightness of the screen.
Alert	Turn on/off and set the alert.
Event	View recordings or highlights from video.
White Noise	Select your desired white noise type. Play Settings: Loop a single track or a playlist. Set a timer for the duration of the song. Volume: Adjust the volume using the up and down buttons.
Camera Settings	Wi-Fi: Enable WiFi to pair the camera with the app for viewing and managing your device data.
	Add Camera: Add up to two cameras for a monitor.
	Audio: Enable or disable audio recording. Adjust the speaker volume.
	Video: Customize settings on video recording.
	Pan-tilt: Adjust the speed levels and perform pan-tilt calibration.
	Storage: Check the camera storage, and format the microSD card.
	LED Lighting: Turn on / off the camera's status LED.
	About Device: Check the device information of the camera.
	Delete Camera: Remove a connected camera from the list.

Monitor Settings	Sleep Mode: Enable or disable sleep mode. Select VOX mode.
	Sleep Time: Set the time for sleep mode.
	Smart Connect: It's enabled by default. When enabled, it will automatically switch to Wi-Fi data transmission mode when the local signal is poor.
	Troubleshoot: Refer to this section for troubleshooting.
	General: Set the time, language and temperature units.
	Customer Service: Get contact information.
	Restore Factory: Restore to factory defaults.
	About Device: Check the device information of the monitor.
	Enhancement Plan: When enabled, when an exception or error occurs in the Monitor, the Logs will be automatically uploaded to eufy to provide you with a better experience.

On-Screen Icons


	Wireless signal strength
	Monitor connected to Wi-Fi
	Monitor disconnected to Wi-Fi
	Current temperature
	Sound level of the room the camera is in
	Time
	Status of the monitor battery

Placing the Camera

The camera can be placed on a table or shelf, or can be installed on a wall or crib.

Select a location and height that achieves your desired view and is within reach of a power outlet. Use the monitor to test the viewing angle from your desired mounting spot.

On the Wall

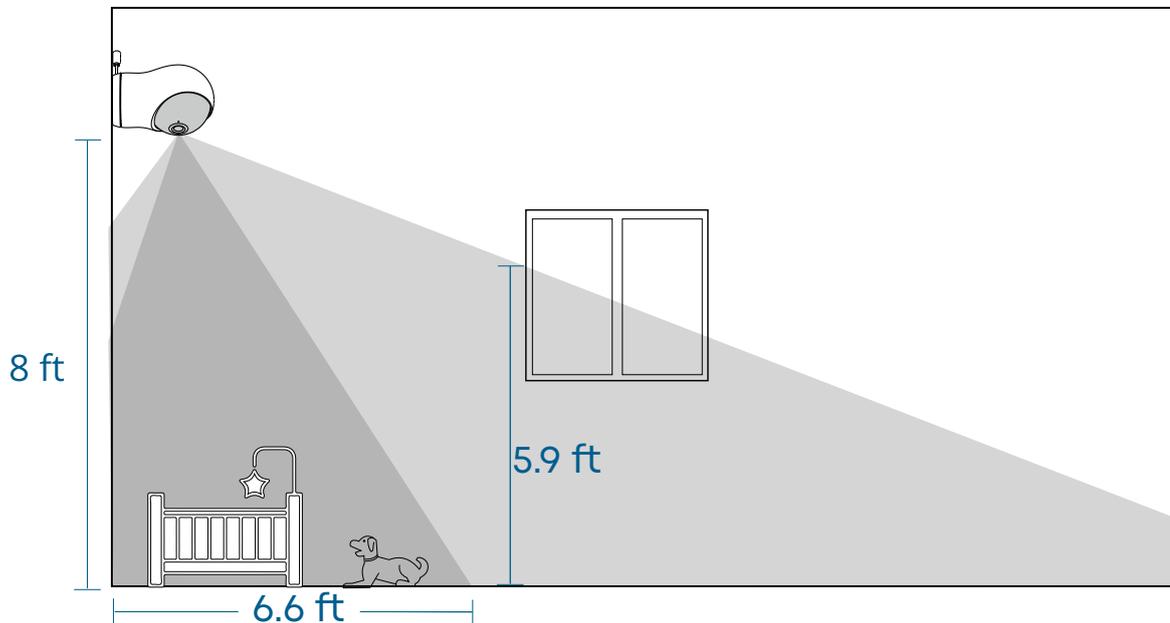


💡 Prepare a longer power cable if the included one is too short for 8ft (2.4m) installation.


Follow the steps below to mount the camera on the wall.

💡 Disconnected the camera from the power outlet before mounting.



1. Place the mounting plate against the wall, matching the direction as UP indicates. Mark the screw holes with a pencil.

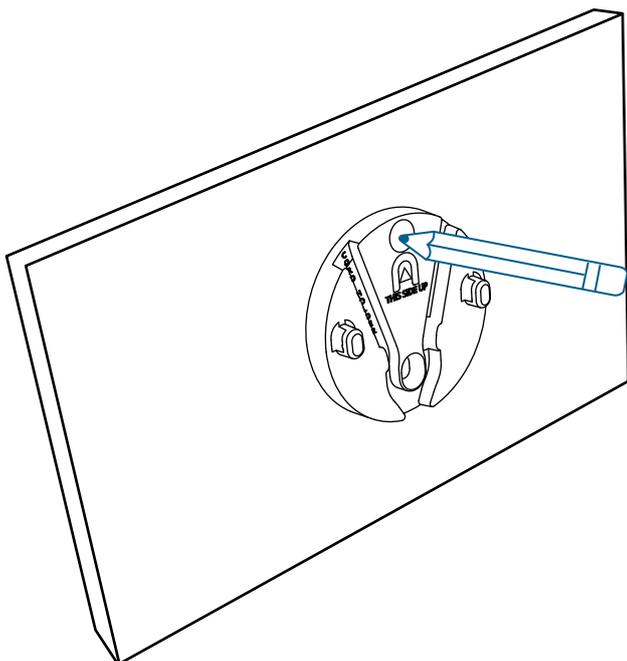



2. Drill holes into the wall and then insert anchors into the holes. Anchors are not needed for wooden walls.

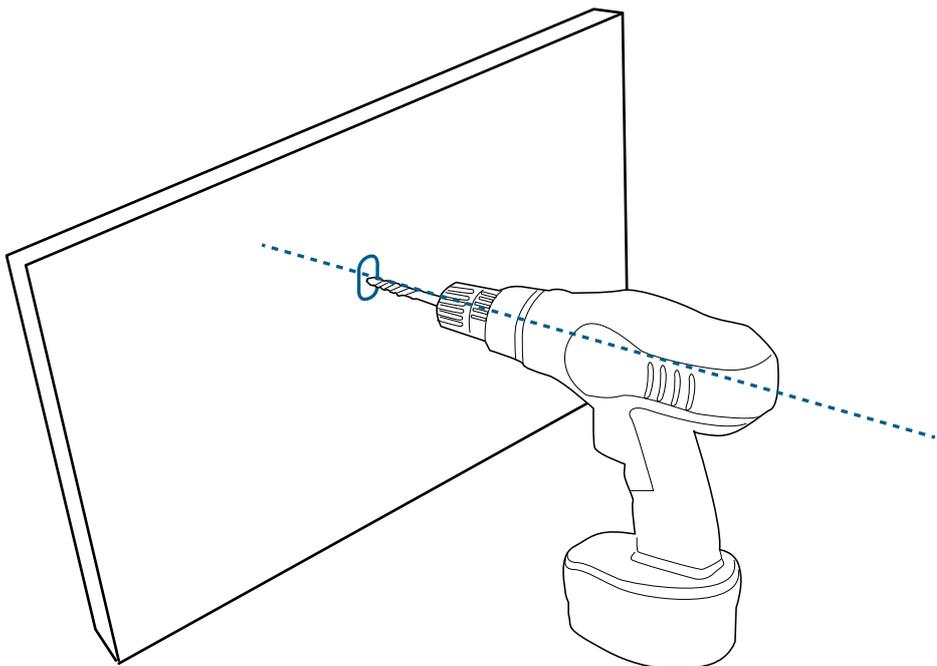


3. Secure the mounting plate to the wall or ceiling with the screws.

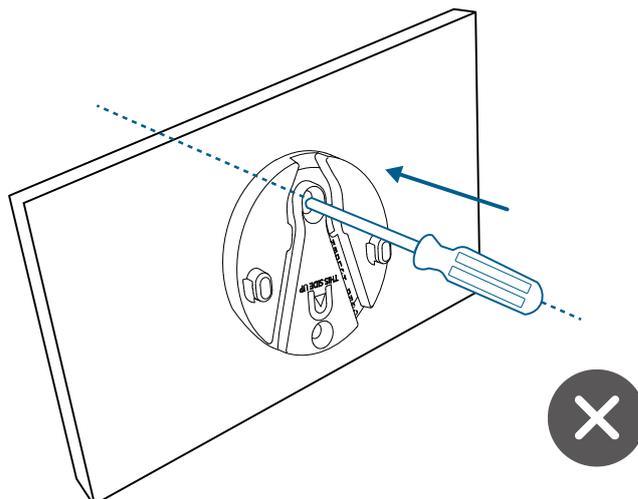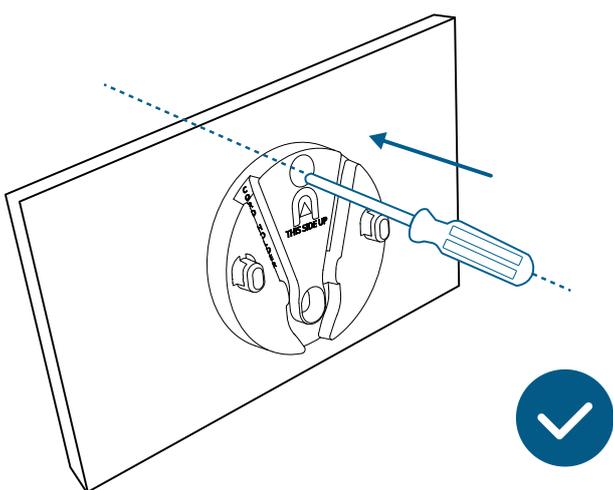


4. Keep the camera disconnected from power. Connect one end of the charging cable to the camera.

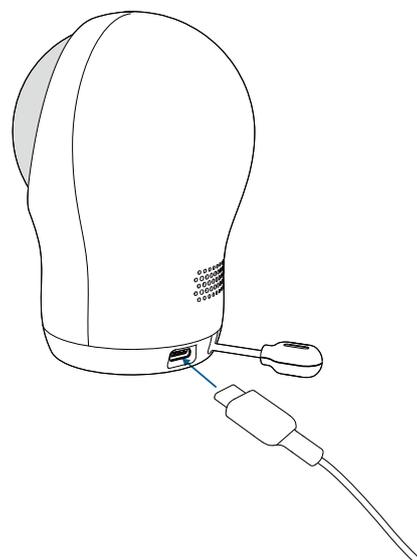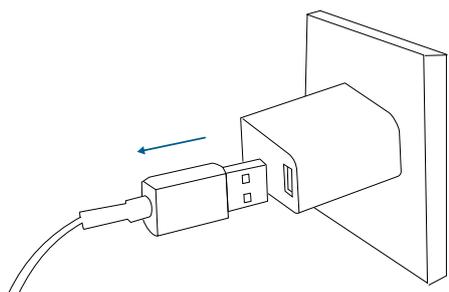

5. Place the cable into the cable channel of the mounting plate.

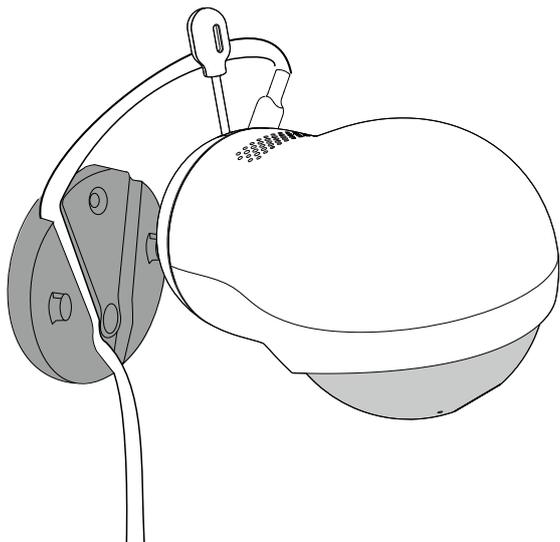


6. Slide the camera onto the mounting plate and make sure it is attached securely.

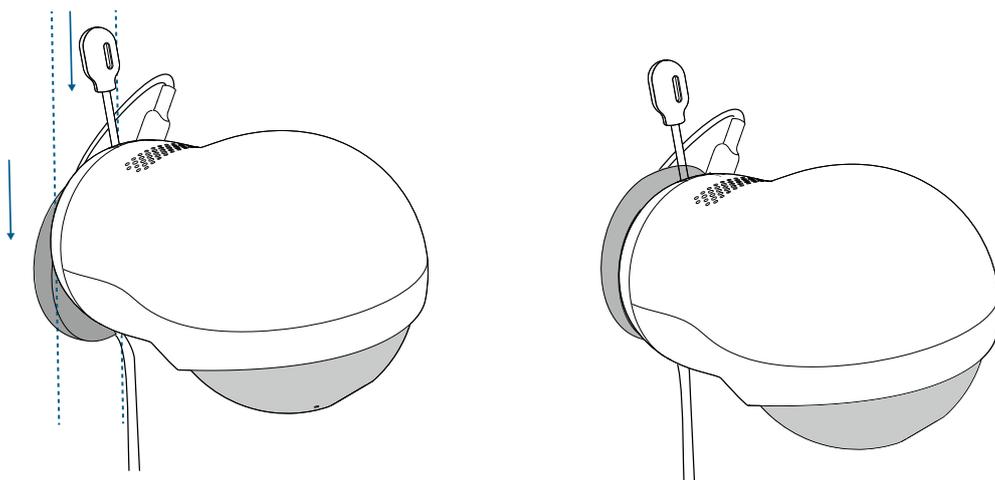

On a Table or Shelf

Adjust the angle of the camera to aim at your baby.

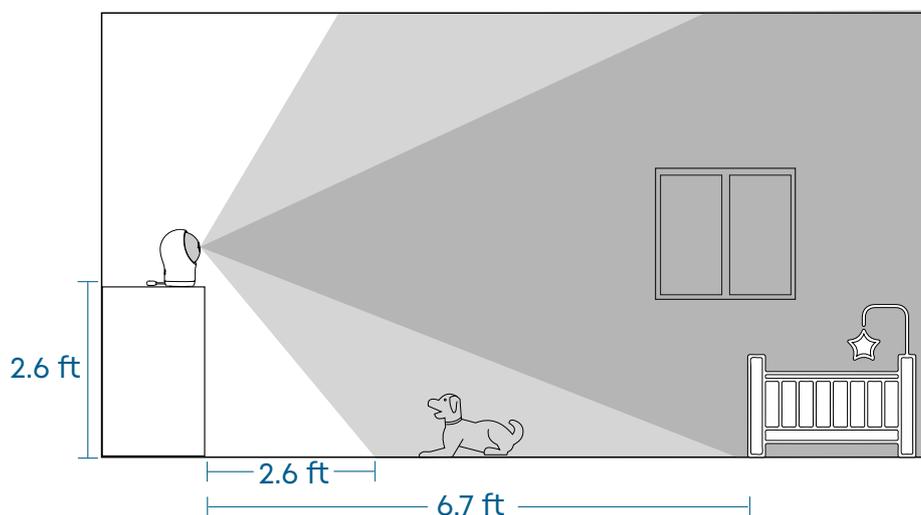


On the Crib

You can install the camera on the crib either with a single cot mount or a set of cot mount and gooseneck arm.


- 💡 When using the cot mount, attach it out of the reach of the child. Do not use the cot mount when the child starts trying to get up on its hands and knees in a crawling positions.

Option 1 With a Cradle Mount

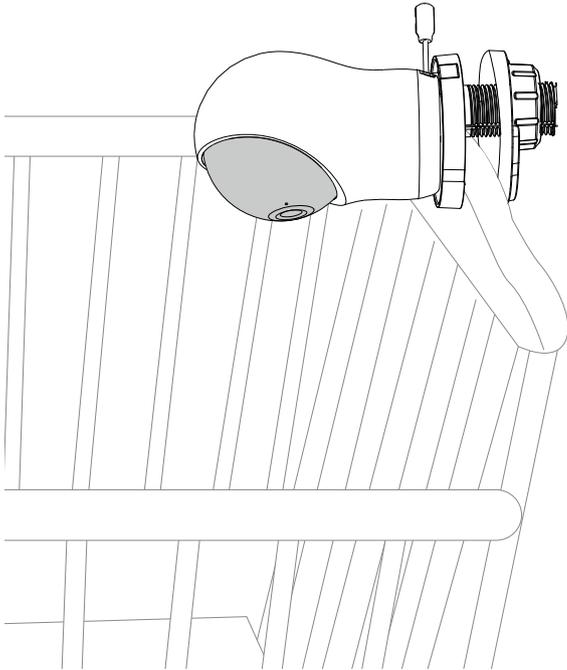

1. Align the mounting plate with the cradle mount, and slide the mounting plate onto the cradle mount, matching the direction as UP indicates.
2. Slide the camera onto the mounting plate and make sure it is attached securely.
3. Loosen the screw to adjust the width, install the cradle mount to the crib, and tighten the screw to secure the installation.

Option 2 With Cradle Mount and Gooseneck Arm

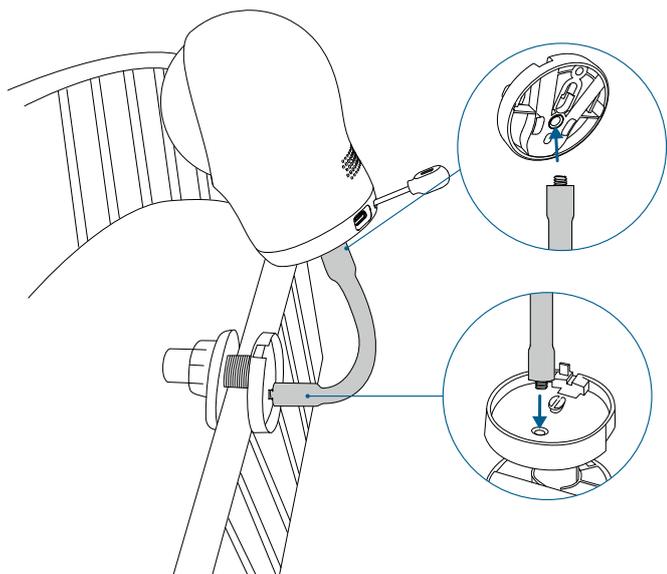

1. Align the mounting plate with the cradle mount, and slide the mounting plate onto the cradle mount, matching the direction as UP indicates.
2. Slide the camera onto the mounting plate and make sure it is attached securely.
3. Align the two ends of the gooseneck arm with the screw holes on the cradle mount and on the mounting plate respectively, and screw down to secure the connection.